

# Programming System Date & Time

## Customer Level Access

- While on-hook, Press **TRSF** and then dial **200**  
Your display shows [ENABLE CUS. PROG. – PASSCODE].
- Dial the four digit passcode: **1234**  
The display shows [ENABLE CUS. PROG.- DISABLE].
- Dial **1** to enable.  
The display shows [ENABLE CUS. PROG. – ENABLE].
- Press **TRSF**. The keyset returns to its idle condition.

## Programming Date & Time

The display format is the following:

W (Day of week): enter **0** for Sunday and **6** for Saturday.

MM (Month): Enter **01** for January and **12** for December.

DD (Day of the month): Enter a number in the range of **01-31**.

YY (Year): Enter the last two digits of the year.

HH (Hours): Use the 24 hour clock and enter a number in the range of **00-24**.

MM (Minutes): Enter a number in the range of **00-59**.

- With on-hook, press **TRANSFER** and then dial **505**
- Enter the new time and date using the above format OLDWMMDDYY : HHMM
- Verify the time and date and reenter the if necessary OLDWMMDDYY : HHMM
- Press TRSF to store and exit programming OR press SPK to store and advance to the next program.